

<b>1. Product introduction</b>	1.0	Introduction	4	
	1.1	Mode of operation	5	
<b>2. Technical data</b>	2.1	CMF Series A through F	6	Technical data
	2.2.1	Transmitter Compact IP 67	7	
	2.2.2	Transmitter 19" IP 20	8	
	2.2.3	Transmitter 19" IP 20 with extended outputs	8	
	2.2.4	Transmitter Ex-d	9	
	2.3	Meter uncertainty. Display/frequency and pulse output	11	
	2.4	Pressure drop	12	
	2.5	Sensor cable specification	14	
	2.6	HART® Communication. Add-on module	14	
	2.7	PROFIBUS® Communication. Add-on module	14	
	2.8	Input characteristics	14	
	2.9	Output characteristics	15	
<b>3. Dimensions and Weight</b>	3.1	FlexCOR Series Instruments	16	Dim. & weights
	3.2	Ex-d Compact version	17	
	3.3	IP 67 Compact version	17	
	3.4	Sensor with "heating jacket"	18	
	3.5	CMF-A	19	
	3.6	CMF-A. High temperature version -40°C to +180°C	19	
	3.7	Transmitter	20	
	3.8	Transmitter Ex-d	21	
<b>4. Installation of sensor</b>	4.1	Location	22	Installation of sensor
	4.2	Cavitation	22	
	4.3	Air bubbles	22	
	4.4	Mounting	22	
	4.5	Vibrations	23	
	4.6	Cross-talk	23	
	4.7	Magnetic fields	23	
	4.8	Transportation/storage	23	
	4.9	Horizontal mounting in pipe CMF B - F	24	
	4.10	Vertical mounting in pipe	25	
	4.11	CMF-A	26	
	4.12	Location	26	
	4.13	Mounting	26	
	4.14	Horizontal mounting in pipe	27	
	4.15	Vertical mounting in pipe	28	
	4.16	Before commissioning	29	
	4.17	Mounting of pressure release valve	29	
	4.18	Ex installations	30	
<b>5. Installation of Transmitter</b>	5.1	Compact IP 67 version	31	Installation of signal con.
	5.2.1	Add-on modules	33	
	5.2.2	Remote installation. Wall mounting Compact IP 67 version	34	
	5.2.3	Compact IP 67. Installation/exchange of SENSORPROM® memory unit	35	
	5.2.4	Remote installation. Signal converter in 19" insert	36	
	5.2.5	Installation in wall mounting enclosure	37	
	5.2.6	Installation in the back of a panel	37	
	5.2.7	Installation in panel mounting enclosure (front of panel)	38	
	5.2.8	Add-on modules	39	
	5.2.9	Compact Ex-d version	40	
	5.2.10	Remote installation of multiple plug at the sensor	41	
	5.2.11	Compact Ex-d version. Location of the SENSORPROM® memory unit	42	
	5.2.12	Compact Ex-d version. Installation of add-on module	43	
<b>6. Electrical connection</b>	6.1	Signal Transmitter IP 67 and 19"	45	Electrical connect.
	6.2	Transmitter with extended output's (only 19" version)	46	
	6.3	Signal Transmitter 19" Ex-version	47	
	6.4	Connections of add-on modules	48	
	6.5	HART® communication	48	
	6.6	PROFIBUS PA	48	
	6.7	Transmitter Compact Ex-d	49	
	6.8	Setting of active or passive current out-put mode	50	
	6.9	Installation examples	50	
<b>7. Commissioning</b>	7.1	Keypad and display layout	51	Commissioning
	7.2	Menu build-up	52	
	7.2.1	Password	52	
	7.3	Transmitter	53	
	7.4	Basic settings	54	
	7.5.1	Outputs setting menu	57	
	7.5.2	Relay output	60	
	7.5.3	External input	60	
	7.5.4	Sensor characteristics	61	
	7.5.5	Reset mode	62	
	7.5.6	Service mode	64	
	7.5.7	Operator menu setup	66	
	7.5.8	Product identity	67	
	7.5.9	Change password	67	
	7.5.10	Language mode	67	
	7.5.11	HART® communication. (Add-on module)	68	
	7.6.1	Operator menu. Flowrate	69	
	7.6.2	Totalizer	69	
	7.6.3	Batch	69	
	7.7.1	Parameters	70	
	7.7.2	Dimension-dependent factory setting	71	
	7.8.1	Error handling	72	
	7.8.2	List of error numbers	73	
<b>8. Trouble shooting</b>	8.1	Transmitter	74	T. s.
	8.2	Check for air in the system	75	
	8.3	Check of 0-point accuracy	75	
<b>9. Spare parts</b>	9.1	Transmitter	76	Spare Parts
	9.2	Compact Ex-d	76	
	9.3	Transmitter 19" Standard version	77	
	9.4	Transmitter 19" Ex-version	77	
	9.5	Panel mounting kits	77	
	9.6	Cables and connectors	78	
	9.7	SENSORPROM® memory unit	78	
	9.8	Add-on module	78	

## 1. Product Introduction

### 1.0 Introduction

FlexCOR™ coriolis mass flowmeters measure flow in kilograms or pounds. The measurement is independent of changes in process conditions such as temperature, density, pressure, viscosity, conductivity and flow profile.

FCI FlexCOR™ mass flowmeters are for the direct measurement of:

- Mass flow rate
- Total mass
- Density
- Temperature
- Volumetric flowrate
- Total volume
- Fraction flow
- % fraction (e.g. °Brix)
- Total fraction

Typical applications are found in all industries. E.g.:


- Water industry: Dosing of chemicals for waste water treatment.
- Food industry: Dairy products, beer, wine, soft-drinks, fruit juices and pulps.
- Chemical industry: Detergents, pharmaceuticals, acids, alkalis.
- Automotive industry: Fuel injection nozzle testing, filling of a.c.units, ABS brake test.
- Other industry: Filling of gas bottles, furnace control for district heating, paper pulp.


FlexCOR™ mass flowmeters are characterised by simplicity:

- ⇒ Simple to install
- ⇒ Simple to commission
- ⇒ Simple to operate
- ⇒ Simple to maintain




The unique **SENSORPROM® flow memory unit** contains sensor data and signal converter settings. The unit is located on the connection board for the signal converter. Immediately on starting, the signal converter uploads the calibration data and factory settings matching the sensor and commences measurement. All customer application settings are retained in the SENSORPROM® unit. If the signal converter is replaced, the new converter will upload all previous settings and resume measurement without any need for reprogramming.

 Documentation needs to be consulted.

 The user shall be made aware of that, if the equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.

## 1.1 Mode of operation

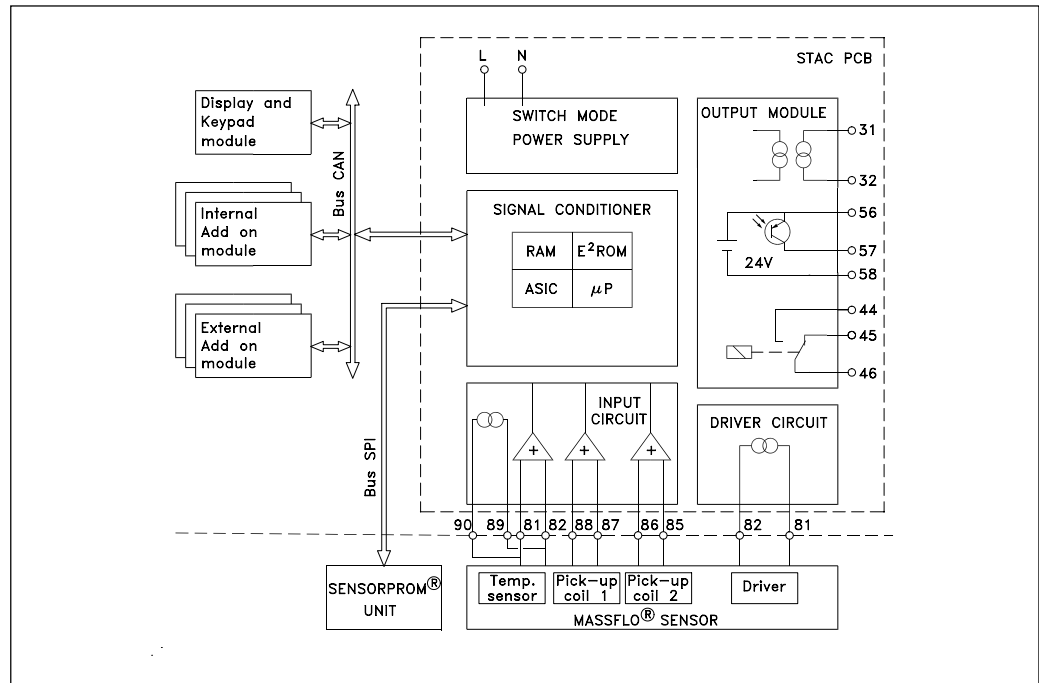

The flow measuring principle is based on the Coriolis law of movement. The flowmeter consists of a sensor and a transmitter.

### Sensor

The sensor is energized by the driver circuit which oscillates the pipe at its resonant frequency. Two pick-ups, 1 and 2 are placed symmetrically on either side of the driver. If liquid or gas flows through the sensor, the Coriolis force will act on the measuring pipe and cause a pipe deflection which can be measured as a phase shift on pick-up 1 and 2.

### Transmitter

The transmitter consist of a number of function blocks which convert the sensor signals into flow readings.

### Driver circuit

This module excitates the sensor at its resonant frequency. The amplitude of the driver signal is automatically regulated via a "Phase Locked Loop", to ensure a stable output from the 2 pick-up's.

### Power supply

2 different types of power supplies are available. 12 - 24 V a.c./d.c. or a 115 - 230 V a.c. switch mode type.

### Input circuit

The flow proportional signal from the 2 pick-up's is conditioned in this circuit to a digital signal for further signal processing. The temperature output from the sensor is measured with a current loop and an optional amplifier in a wheatston configuration. The temperature signal is also converted into a 32 bit digital format.

### Digital signal processor

The signals from the 2 pick-up's, the temperature measurement and the driver frequency is converted into flow proportional signals used for calculation of mass flow, volume flow, fraction flow, temperature and density. Inaccuracies in the signal converter as a result of long-term drift and temperature drift are monitored and continuously compensated for via the self-monitoring circuit. The analog to digital conversion takes place in an ultra low noise ASIC with 23 bit signal resolution. The dynamic range of the signal converter is thus unsurpassed, with a turn down ratio of min. 3000:1.

**CAN communication.** The signal converter operates internal via a internal CAN communication bus. Signals are transferred to/from a signal conditioner to the display module, internal/external option modules and the dialog module.

**Dialog module.** The display unit consist of a 3 line display and a 6 key keypad. The display will show a flowrate or a totalizer value as a primary reading.

**The output module** converts flow data to an analog, a digital and a relay output. The outputs are galvanically isolated and can be individually set to suit a particular application.